

# Detection of organic contamination on surfaces by fluorescence measurement

By André Lohse and Tilo Zachmann, applications, SITA Messtechnik GmbH

Chemical and filmic residues on surfaces cause quality problems in industrial production processes such as coating, bonding and welding. Increasing quality requirements and the change to more efficient production methods, e.g. adhesive bonding or electron-beam welding (EBW), creates a demand for clean surfaces and its verification. Fluorescence measurement is a suitable and proven non-destructive surface inspection method due to high sensitivity, fast response and contactless measurement.

**Ref: FFT120525**

All content © Fastener + Fixing Magazines, 2025.

This technical article is subject to copyright and should only be used as detailed below.

Failure to do so is a breach of our conditions and may violate copyright law.

You may:

- View the content of this technical article for your personal use on any compatible device and store the content on that device for your personal reference.
- Print single copies of the article for your personal reference.
- Share links to this technical article by quoting the title of the article, as well as a full URL of the technical page of our website – [www.fastfixtechnology.com/technical](http://www.fastfixtechnology.com/technical)
- Publish online the title and standfirst (introductory paragraph) of this technical article, followed by a link to the technical page of the website – [www.fastfixtechnology.com/technical](http://www.fastfixtechnology.com/technical)

You may NOT:


- Copy any of this content or republish or redistribute either in part or in full any of this article, for example by pasting into emails or republishing it in any media, including other websites, printed or digital magazines or newsletters.

In case of any doubt or to request permission to publish or reproduce outside of these conditions please contact: [editor@fastfixtechnology.com](mailto:editor@fastfixtechnology.com)

# Detection of organic contamination on surfaces by fluorescence measurement

By André Lohse and Tilo Zachmann, applications, SITA Messtechnik GmbH

Chemical and filmic residues on surfaces cause quality problems in industrial production processes such as coating, bonding and welding. Increasing quality requirements and the change to more efficient production methods, e.g. adhesive bonding or electron-beam welding (EBW), creates a demand for clean surfaces and its verification. Fluorescence measurement is a suitable and proven non-destructive surface inspection method due to high sensitivity, fast response and contactless measurement.

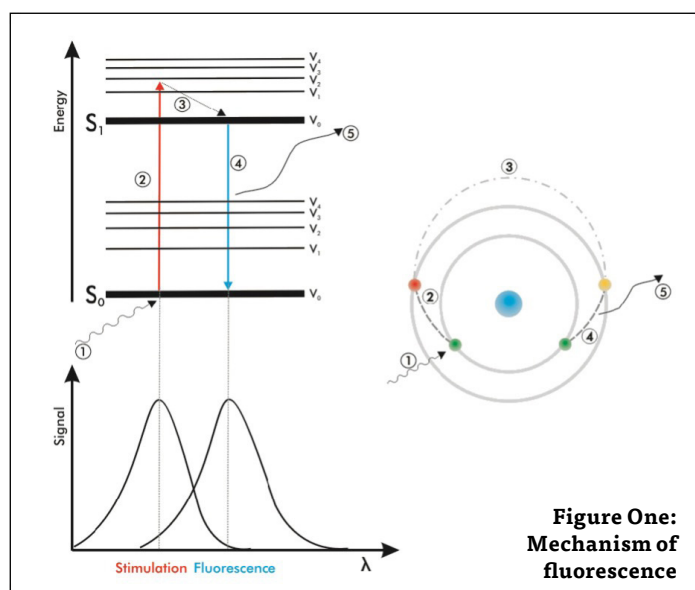

**Figure One:**  
Mechanism of  
fluorescence

## Physics of fluorescence


Fluorescence is a form of luminescence. Luminescence refers to the emission of light after the excitation of atoms or molecules. In case of photon emission (light), it is called photoluminescence. The mechanism of fluorescence is shown in Figure One. To stimulate fluorescence, the test surface is radiated with an ultraviolet light source. Molecules of any contamination on the surface absorb the high energetic radiation (1). Excited by the photons, the electrons reach a higher energy level (2). The excited molecule collides with its environment and releases a small part of the absorbed energy (3).

The remaining amount of energy is now released as emission (4) and the electron returns from excited to its initial state. The emitted photon has a longer wavelength and lower energy than the absorbed light (5). This difference in energy is called 'Stokes shift'. The emission of fluorescence light occurs diffusely in every direction (such as from a point light source) and dies after nanoseconds. This fluorescent characteristic can be lost by photobleaching.

## Fluorophore

Fluorophore refers to a functional group within a molecule that is, because of the existence of many  $\pi$ -systems, able to absorb energy of particular wavelengths and to re-emit energy of another wavelength.

In a  $\pi$  system, two atoms are connected via a double bond which means both atoms each contribute two pairs of electrons to the bond. Those electrons are easily stimulated to fluorescence. Wavelength and quantity of the emitted fluorescence radiation are dependent on the fluorophore, its amount, and chemical surroundings.

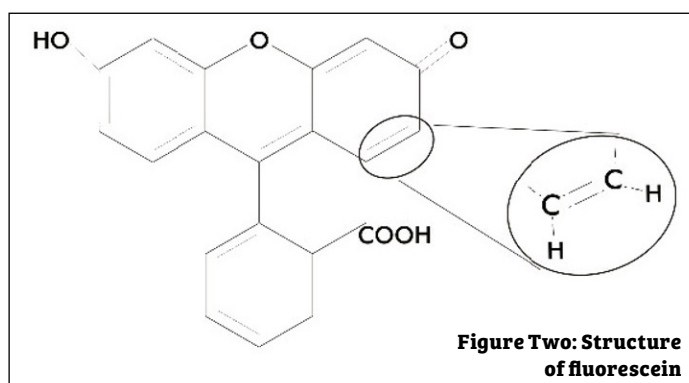


**Figure Two: Structure  
of fluorescein**

Fluorescein, an important fluorescence dyestuff, is shown in Figure Two. Fluorescein contains many double bonds and because of that, shows a pronounced fluorescence. The fluorescence efficiency of a fluorophore is characterized by the quantum yield  $Q$ . It specifies which share of the intensity of the absorbed energy can be emitted as photon.

## Fluorescence of contamination

The fluorescence of indirect production materials, such as metalworking fluids, is based on aromatic ring systems that are contained as additives, or on the unsaturated structures of oil and grease. Fluorescence measurement can detect very low amounts of residual contamination. Even fingerprints which consist of less than 2% sebum can be measured.

The excitation and detection wavelengths of the SITA fluorescence sensors with 365nm and 460nm (marked violet and blue in Figure Three) were optimised to detect indirect production materials within the industrial manufacturing of parts. These include cooling and cutting lubricants, greases, anti-rust oils and release agents. Depending on the measurement device and the contaminant or coating, residual amounts from 10mg/m<sup>2</sup> and lubrication films from 10 g/m<sup>2</sup> or higher can be detected. Figure 3 shows the fluorescence spectra of three different processing oils.

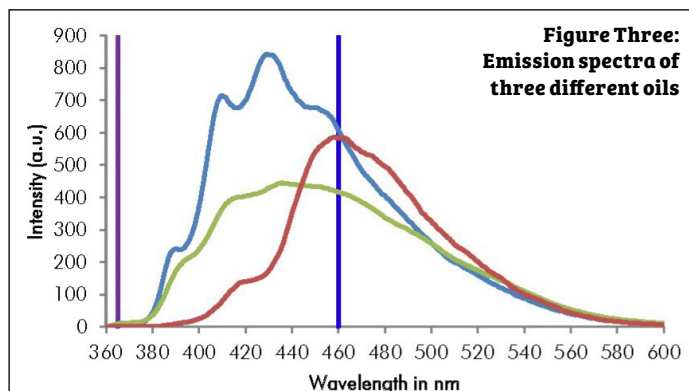


**Figure Three:**  
Emission spectra of  
three different oils

## Fluorescence of substrates

Metallic and many ceramic surfaces do not fluoresce. Depending on impurity ions, matrix, and processing, fluorescence is possible on glass. The tendency of other materials such as paper, textiles or plastics towards fluorescence is considerably stronger due to their complex structure of organic molecules.

## Fluorescence sensors and measurement

SITA Messtechnik GmbH from Germany is a leading vendor of fluorescence measurement devices for surface inspection in industrial applications. The highly integrated opto-electronic sensor design, as demonstrated in Figure Four, uses high power UV LEDs and lenses to create a collimated high intensity irradiation of the surface. The emitted radiation is optically filtered, and its intensity is determined by a sensitive detector (photo-diode). Based on a reference calibration standard, the raw detector signal is converted into a normalised measurement value, taking into account the controlled excitation power and the ambient light level.

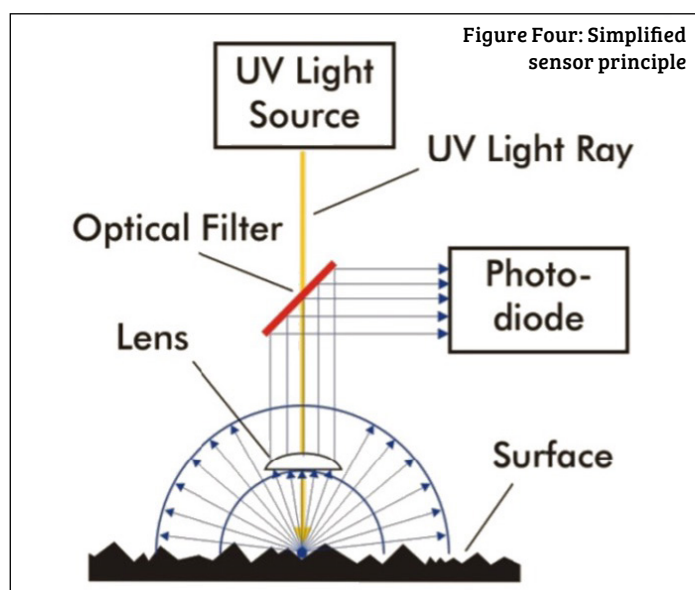

The measured quantity is the relative fluorescence intensity stated in the arbitrary unit RFU (Relative Fluorescence Unit) defined by proprietary inorganic solid-state fluorescence reference standards.

### Applications

Fluorescence measurement is an indirect method to receive quantitative results of the amount or layer thickness of organic material. Pass/fail limits are defined, depending on the specific contaminant and the subsequent processing, based on the interference potential of different material to a specific process and its parameters. By processing different quantified cleanliness states and typically destructive testing (cross-cut, pull-off test, corrosion, cross-section), limits can be determined.

The fluorescence measurement devices can be used optimally at the production process and are an excellent supplement to analytical laboratory methods for contamination analysis. A common application is to set up or optimise new or existing cleaning processes. The results of process parameter variation can be evaluated in real time.

A further advantage of the method: functional surfaces can be selectively inspected and the contaminant's distribution on the surface can be shown.

## Inspection of die-cast housings before adhesive bonding or sealing

Aluminium die-cast housings are used in automotive industry, e.g. for engine control units (ECU) and steering gear housings. Residues of release agents from the casting and cooling lubricants from machining reduce adhesion of adhesives. Quality issues are adhesive failure, corrosion creep and leakage which destroy the electronics or durability of mechanical gear

parts. Beside handheld units, automated test benches and in-line systems for 100% inspection directly before the dispensing station can be installed.

## Inspection of gearbox or turbocharger components before EBM


Rods and wheels are automatically joined by laser or electron beam welding. In case of organic residues like anti-corrosion and machining oils, the welding seam is affected by pores. The thermal process burns the residues; gas is formed and is embedded in the melted material. Depending on pore number and size, strength and tightness of the weld are decreased.

## Inspection of electrical wires after stripping and terminals before friction welding

The insulation of electrical wires is removed by lasers. Residues of the PVC insulation increase the electrical resistance. Different laser parameters result in poor quality (where 200 RFU were measured) and high quality (where 6 RFU to 9 RFU were measured). The original insulation was out of range (> 4,000 RFU). In production, the proper working of the laser stripping system can be verified. Electrical terminals and wires are connected by friction or ultrasonic welding. Lubricant residues interfere the welding process and reduce the electrical connection's quality.

## Inspection of valves in medical technology industry

A producer of valves for medical technology had to fulfil customer's specifications of maximum amount of cutting oil residues of 25mg/m<sup>2</sup>. Based on a calibration curve shown in Figure Five, a maximum value of 5 RFU was defined as an acceptable level to pass the customer's requirement.

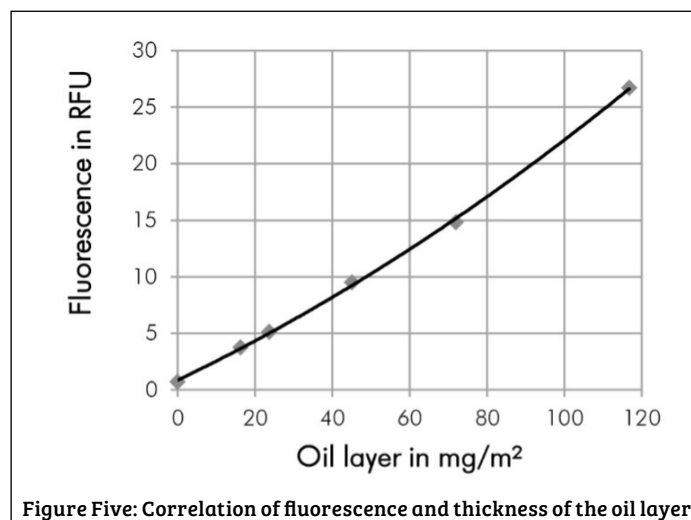

**Figure Five: Correlation of fluorescence and thickness of the oil layer**

## Conclusion

The phenomenon of fluorescence can be used to accurately detect and quantify the presence of organic contaminants on surfaces. Instruments are available to measure the contamination, which are non-destructive, non-contact and give a result almost instantly. They are suitable for use in a production or engineering environment, to evaluate cleaning processes and supplied parts prior to various joining or coating applications.

SITA Messtechnik GmbH has over 10 years of experience in development, production and worldwide application of handheld device and integrated inspection systems using this technology for industrial manufacturing applications. The SITA CleanoSpector is an easy to use handheld non-destructive metal cleanliness test instrument used for measuring organic contamination such as oil, grease, coolants, release agents and cleaning fluid on metal surfaces. There are instruments which can be used in-line for continuous process control.

SITA Messtechnik GmbH's products are distributed in the UK and Ireland by Intertronics under the Dyne Testing brand.